TREKSTOR®
Enjoy now.

EN

SurfTab® breeze 7.0 plus

OPERATING INSTRUCTIONS

Contents

1) About the SurfTab breeze 7.0 plus 4

2) Safety information 5

Operational safety 5
Repair 6
Intended operating conditions 7
Power supply 7
Care and maintenance 7
Information on the memory capacities indicated 7

3) Technical specifications 8

4) Scope of delivery 8

5) Controls and connections 10

6) Charging the SurfTab 10

7) Switching on the SurfTab 10

8) Elements on the home screen 11

9) Using the touch screen 12

Scrolling 12
Selecting an element 13
Enlarging and reducing the view 14
Using the display keyboard 14

10) Personalising the home screen 15

Adding apps to the home screen 15
Adding widgets to the home screen 15
Removing apps and widgets from the home screen 15
Changing the screen background 16

11) Setting up a screen lock 16

12) Connecting to the Internet 16

13) Using the camera 17
Taking a photo 18
Recording a video 18
Zooming 19

14) Setting up/removing an email account 19
Setting up an email account 19
Removing an email account 19

15) Installing/uninstalling apps 20
Downloading and installing apps 20
Uninstalling apps 20

16) Connecting other devices 21
Connecting the SurfTab to a computer 21
Connecting a USB device 21

17) Activating standby mode 21

18) Reset and recovery mode 22

19) Switching off the SurfTab 23

20) Notes on copyright and trademarks 24
Open Source Software 24

21) Notes on disposal 25
Disposal 25
Recycling 25

22) Notes on liability and warranty 25

We hope you enjoy your TrekStor SurfTab breeze 7.0 plus.
Please read the following passages carefully to familiarise yourself with the functions of this product and how to operate it.

IMPORTANT!
Follow the safety information in Section 2.

IMPORTANT!
Please keep these instructions in a safe place for future reference. Should the device change hands, pass these instructions on to the new owner.

Up-to-date product information is available on the TrekStor website: www.trekstor.de

Visit www.trekstor-onlineshop.de for additional products and accessories.

1) About the SurfTab breeze 7.0 plus

The TrekStor SurfTab breeze 7.0 plus is a tablet PC with IPS touch screen for surfing the Internet, using apps and playing music, videos and games.

Only use the device for its intended purpose. The manufacturer is not liable for damages resulting from improper use. Furthermore, the manufacturer shall not be responsible for damages or loss of data and any subsequent damage caused.

2) Safety information

These instructions use the following warning symbols and key words:

DANGER
Indicates possible danger to life and/or danger of severe, irreversible injuries.

CAUTION
Follow instructions to avoid injuries and material damage.

WARNING
Follow instructions to avoid material damage.

NOTE
Further information about the use of the device.

Operational safety

CAUTION
Those who, as a result of their physical, sensory or mental capabilities, or lack of experience or knowledge, are not in a position to use the product safely must not be allowed in the vicinity of the product without supervision or instruction by a person responsible for their safety. Supervise children around the product.

DANGER
Keep packaging materials out of reach of children (e.g., plastic sheets). There is a danger of suffocation.

DANGER
Some accessories can pose a choking hazard for babies and young children. Keep these accessories out of reach of babies and young children.

DANGER
Never open the casing of the device or the charger: This may cause an electrical shock, short circuit or fire!

DANGER
Do not insert any object into the ports or openings of the device or charger: This may cause an electrical shock, short circuit or fire!

DANGER
Do not cover the device or charger during operation or while charging. This may cause the device/charger to overheat and potentially catch fire!

CAUTION
This device can generate high sound volumes. Never listen at high volumes for long periods. Doing so can result in immediate or gradual hearing damage. Remember: Permanent hearing damage may only emerge later in life. You may become used to listening to high volumes over time, making them appear normal to you. However, your hearing may have already been damaged. The higher you set the volume, the more quickly your hearing can be damaged.

DANGER
Your safety is very important to us! Safety always has first priority in road transport. Protect yourself and other road users by operating the device only if the traffic situation allows it and you do not endanger or hinder anyone. Adjust the volume of the device for your safety so that you can continue to react to all the sounds around you. Local legislation in force applies.

WARNING
Do not exert excessive pressure on the display, as it may break.

max. 3 m

Avoid using USB cables over 3 m in length.

Exposing the device to electrostatic discharge can interrupt the data transfer between the device and the computer or impair the functions of the device. Should this happen, disconnect the device from the USB port and reconnect it or rebuild the WiFi connection from scratch.

Repair

WARNING
No parts inside the device require maintenance or cleaning.

WARNING
Should the device become wet, turn it off immediately. Ensure the device is checked for operational safety before using it again.

Intended operating conditions

Protect the device from extremely high or low temperatures and fluctuations in temperature. Use it at an ambient temperature between 10º C and 40º C.

Do not place the device near a heat source and protect it from direct sunlight.

Never expose the device to humidity, condensation or moisture.

Ensure you use and store the device in a dust-free environment.

Power supply

CAUTION
Only ever use the original charger or a charger with the correct voltage and amperage to prevent damage to the device. If you have to resort to a universal charger, pay attention to the polarity of the charging device as well as the voltage and amperage. Your device may suffer irreparable damage if these specifications are not properly adhered to.

CAUTION
Do not use or charge the device if the battery is damaged or leaks.

Care and maintenance

Never clean the surface of the device with solvents, paint thinners, cleaning agents or other chemical products. Use a soft, dry cloth or a soft paintbrush.

Information on the memory capacities indicated

The storage capacity indicated on the packaging and in the technical specifications refers to the total storage capacity of your device. The storage capacity of the device indicated by your operating system may differ from the stated storage capacity, as a portion of the total storage is also used by the operating system and system applications.

3) Technical specifications

Dimensions (W x H x D)	193 x 112 x 9.7 mm
Weight	280 g
Processor (CPU)	Cortex A9 dual-core, 1.0 GHz
Graphics processing unit (GPU)	Mali-400 MP2
Battery	Lithium polymer
Housing material	Plastic
Display type	5-point capacitive multi-touch display
Display size	7" (17.78 cm)
Aspect ratio	16: 9
Screen resolution	1024 x 600
Interfaces	Micro USB (with host function), audio out, microphone, camera, microSD card reader, WiFi
Supported memory cards	microSD, microSDHC (max. 32 GB)
Supported operating systems	Linux®, Mac OS® (from OS X 10.6), Windows® (Windows 8, 7, Vista®, XP)
Camera	0.3 MP webcam
Operating system	Android™ 4.2.2 (Jelly Bean)

4) Scope of delivery

- TrekStor SurfTab breeze 7.0 plus
- USB cable (micro USB/USB-A)
- Power adapter (100 V – 240 V)
- Cleaning cloth
- Quick guide
- Product safety and legal information

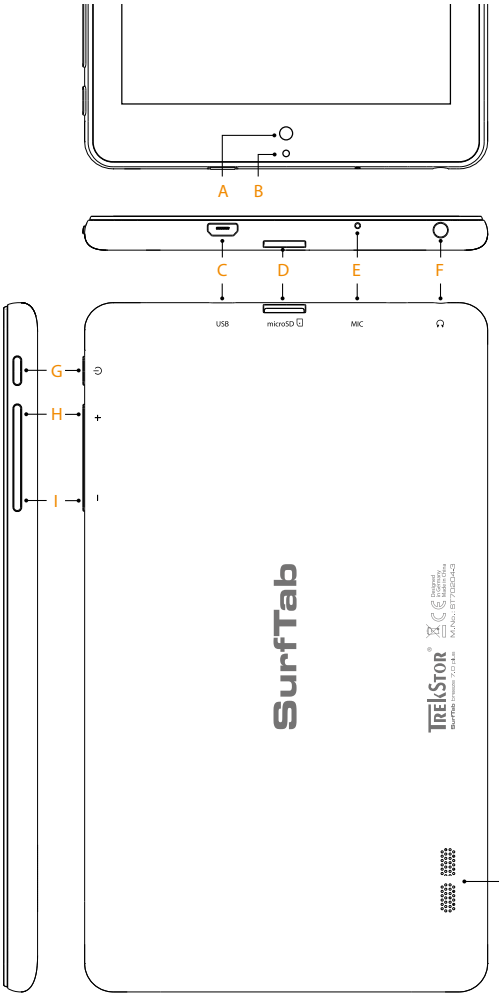
A
B
C
D
E
F
USB
microSD
MIC
G
H
I
+
-
SurfTab
TrekStor
J